

ALFIE STREAM

MINI BEYE LED MOVING HEAD LIGHT



USER MANUAL | MANUAL DE USUARIO

PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE
POR FAVOR LEA LAS INSTRUCCIONES ANTES DE USAR



1. OVERVIEW

ALFIE STREAM

MINI BEYE LED MOVING HEAD LIGHT

ALFIE STREAM is a compact moving head designed to deliver powerful multicolored beams offering effects at high speed. Its rotating panel equipped with powerful 4in1 LEDs and a central green laser facilitate ultra-fast and variable movements capable of delivering total dynamism in all types of settings.

Control

- DMX channels: 13
- Operational modes: DMX512, Master/Slave Auto, Sound Control

Physical

- LED display
- Dimensions: 20.5 x 15 x 27cm
- Weight: 2.58 Kgs / 5.7 Lbs.

Specifications

Source & Optics

- Light Source: 6 x 12W 4-en-1 LEDs
- Power: 90W
- Voltage: AC95V-245V, 50Hz
- Beam angle: 2°

Movement

- Pan 540°
- Tilt 180° (16-bit)

Effects & Functions

- Dimmer: 0~100% smooth dimmer
- Strobe: 20 times/second
- Integrated programs
- 4-in-1 LED technology

2. SAFETY INSTRUCTIONS



For your own personal safety, please read and understand this manual completely before you attempt to install or operate this unit!

- To reduce the risk of electrical shock or fire, do not expose this unit rain or moisture.
- Do not spill water or other liquids into or on to your unit.
- Do not attempt to operate this unit if the power cord has been frayed or broken.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Disconnect from main power before making any type of connection.
- Do not remove the cover under any conditions. There are no user serviceable parts inside.
- Never operate this unit when it's cover is removed. Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 15cm between this device and a wall.
- Do not attempt to operate this unit, if it becomes damaged.
- This unit is intended for indoor use only, use of this product out- doors voids all warranties.
- Always mount this unit in safe and stable matter.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
- Cleaning -The fixture should be cleaned only as recommended by the manufacturer.
- Heat -This fixture should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- The fixture should be serviced by qualified service personnel when:
 - A.** Objects have fallen, or liquid has been spilled into the appliance.
 - B.** The appliance has been exposed to rain or water.
 - C.** The appliance does not appear to operate normally or exhibits a marked change in performance.

3. SYSTEM MENU

OPTION	INSTRUCTION
A001-A512	DMX Address Setting
A1 1-A1 9	Auto Running Mode
S1 1-S1 9	Sound Control Mode, 1-9 means the sound sensitive.

4. DMX CHANNELS

CHANNEL	FUNCTION	DMX VALUE	DESCRIPTION
1	Pan	0-255	0-540° move.
2	Tilt	0-255	0-180° move.
3	P/T Speed	0-255	P/T Speed from fast to slow.
4	Lens Wheel Rotation	0-127	0-360° rotate.
		128-191	Forward endless rotate from slow to fast.
		192-255	Reverse endless rotate from slow to fast.
5	Dimmer	0-255	Linear dimmer from dark to brighter.
6	Strobe	0-9	No Function.
		10-255	Strobe from slow to fast.
7	Red	0-255	Red dimmer from dark to bright.
8	Green	0-255	Green dimmer from dark to bright.
9	Blue	0-255	Blue dimmer from dark to bright.
10	White	0-255	White dimmer from dark to bright.
11	Laser	0-255	Laser dimmer from dark to bright.
12	Macro Function	0-50	CH1-CH1 Valid.
		51-150	Random Auto Running.
		150-255	Sound Control.
13	Reset	0-250	None.
		251-255	Reset after 3s.

5. FUSE REPLACEMENT

Locate and remove the unit's power cord. Once the cord has been removed locate the fuse holder located inside the power socket. Insert a flat-head screw driver into the power socket and gently pry out the fuse holder. Remove the bad fuse and replace with a new one. The fuse holder has a built-in socket for a spare fuse be sure not to confuse the spare fuse with active fuse.

WARNING: If after replacing the fuse you continue to blow fuses, STOP using the unit. Contact customer support for further instructions. Continuing to use the unit may cause serious damage.

6. CLEANING

FIXTURE CLEANING: Due to fog residue, smoke, and dust cleaning the internal and external lenses should be carried out periodically to optimize light output.

1. Use normal glass cleaner and a soft cloth to wipe down the out- side casing.
2. Use a brush to wipe down the cooling vents and fan grill.

3. Clean the external optics with glass cleaner and a soft cloth every 20 days.

4. Clean the internal optics with glass cleaner and a soft cloth every 30-60 days.

5. Always be sure to dry all parts completely before plugging the unit back in.

7. TROUBLE SHOOTING

Listed below is a problem that you may encounter, with a solution.

NO LIGHT OUTPUT FROM THE UNIT

1. Be sure the fuse has not blown. The fuse is located on the rear panel inside the power socket. See Fuse Replacement.

2. Be sure the fuse holder is completely and properly seated.

AUTO SENSING VOLTAGE: This fixture contains a automatic voltage switch, which will auto sense the voltage when it is plugged into the power source.



facebook.com/amprogroup



youtube.com/amprogroup